

SONY®

Sound Bar

Operating Instructions




HT-S100F/SF150

Guide to Parts and Controls

Details are omitted from the illustrations.

Bar Speaker

Front

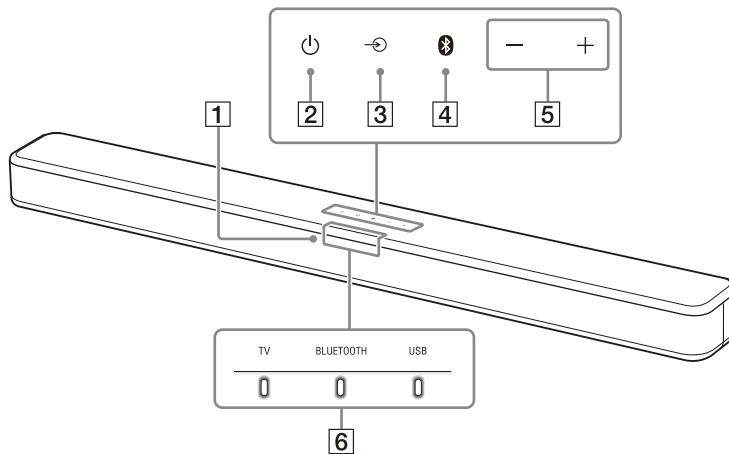

1 Remote control sensor

Point the remote control at the remote control sensor to operate the system.

2 ⏪ (power) button

Turns on the system or sets it to standby mode.

3 ⏪ (input select) button (page 16)

4 BLUETOOTH button (page 21)

5 +/- (volume) buttons

6 Indicators

For details, see "About the indicators on the Bar Speaker" (page 9).

About the indicators on the Bar Speaker

Lighting and flashing of the indicator(s) on the Bar Speaker indicate the input or status of the input device.

Indicators	Status
TV	<ul style="list-style-type: none">• Lights: TV input is selected.
	
BLUETOOTH	<ul style="list-style-type: none">• Lights in blue: BLUETOOTH connection is established (BLUETOOTH input is selected).• Flashes quickly in blue: While waiting for connection with a device.• Flashes in blue: While reconnecting or performing pairing.
	
USB	<ul style="list-style-type: none">• Lights: USB input is selected.• Flashes twice: The play mode is changed.• Flashes three times first, then flashes slowly repeatedly: When connecting an unsupported device.• Flashes repeatedly: While reading data of the connected USB device.
	
The indicators flash when turning on/off the function setting or operating the remote control.	
Indicators	Status
TV	<ul style="list-style-type: none">• Flashes twice: One of the following functions is set to on.<ul style="list-style-type: none">- Night mode (page 19)- Voice mode (page 19)• Flashes once: The audio channel is set to Main (page 20), the sound mode is selected (page 19), or one of the following functions is set to off.<ul style="list-style-type: none">- Night mode (page 19)- Voice mode (page 19)
	
USB	<ul style="list-style-type: none">• Flashes twice: One of the following functions is set to on.<ul style="list-style-type: none">- Dolby DRC (page 20)- Control for HDMI (page 24)- BLUETOOTH standby (page 23)- BLUETOOTH function (page 23)- Auto standby (page 25)- IR repeater (page 15)• Flashes once: The audio channel is set to Sub (page 20) or one of the following functions is set to off.<ul style="list-style-type: none">- Dolby DRC (page 20)- Control for HDMI (page 24)- BLUETOOTH standby (page 23)- BLUETOOTH function (page 23)- Auto standby (page 25)- IR repeater (page 15)
	
TV	<ul style="list-style-type: none">• Flash once: The audio channel is set to Main/Sub (page 20).
	
BLUETOOTH	<ul style="list-style-type: none">• Flash quickly: The protection feature is activated (page 29).
	
USB	<ul style="list-style-type: none">• Flash slowly: The system enters standby mode by the auto standby function (page 25).
	

The indicators flash while adjusting the volume level.

Indicators	Status	
TV	BLUETOOTH	USB
	• Flashes once: The volume level is low.	
	• Flash once: The volume level is medium.	
	• Flash once: The volume level is high.	
	• Flash repeatedly: The sound is muted. • Flash twice: The volume level is set to maximum/minimum.	

Tip


You can turn the indicators off by pressing INDICATOR.

Even if the indicators are turned off by pressing INDICATOR, if you operate the system, the indicators in relation to the operation light or flash.

Remote Control

Some buttons function differently depending on how long the button is pressed. The icons below indicate how long to press the button.

- : Press the button.
- : Press and hold the button for 5 seconds.

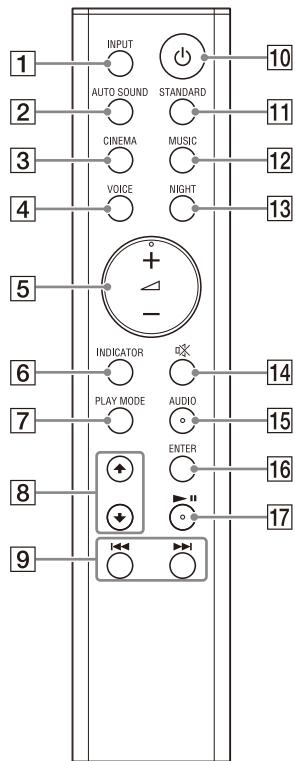

1 INPUT (page 16)

Selects the playback source. When you press INPUT once, the current input indicator flashes. Press INPUT again to select the device you want. Each time you press INPUT, the input changes cyclically as follows. TV input → BLUETOOTH input → USB input

2 AUTO SOUND (page 19)

Selects AUTO SOUND for the sound effect.

3 CINEMA

: Selects CINEMA for the sound effect. (page 19)
: Turns on/off the auto standby function. (page 25)

4 VOICE

: Turns on/off the voice mode. (page 19)
: Turns on/off the Control for HDMI function. (page 24)

5 □ (volume) +*/-

Adjusts the volume.

6 INDICATOR (page 9)

Turns on/off the indicators on the Bar Speaker.

7 PLAY MODE (page 17)

Selects the play mode for USB playback.

8 ▲/▼ (page 17)

Select the content on the TV screen for USB playback.

9 (previous/next)
(page 17, 21)
Pressing the button shortly goes to the beginning of the previous or next file.
Pressing and holding searches backward or forward (rewind/fast forward).

10 (power)
Turns on the system or sets it to standby mode.

11 **STANDARD**
: Selects STANDARD for the sound effect. (page 19)
: Turns on/off the IR repeater function. (page 15)

12 **MUSIC (page 19)**
Selects MUSIC for the sound effect.

13 **NIGHT**
: Turns on/off the night mode. (page 19)
: Turns on/off the BLUETOOTH standby mode. (page 23)

14 (muting)
Turns off the sound temporarily or turn on the sound.

15 **AUDIO***
: Selects the audio channel for Dolby Digital multiplex broadcast. (page 20)
: Turns on/off the Dolby DRC function. (page 20)


16 **ENTER (page 17)**
Plays the content that is selected by / for USB playback.

17 (play/pause)* (page 17, 21)
Pauses or resumes playback.

* The AUDIO, , and buttons have a tactile dot. Use it as a guide during operation.


Listening to the Sound

Listening to a TV and Other Devices

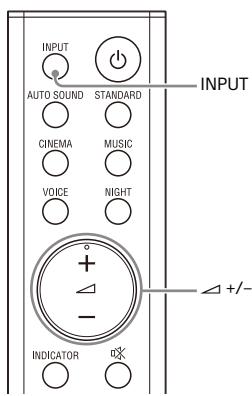

1 Press INPUT repeatedly.

When you press INPUT once, the current input indicator flashes. Press INPUT again to select the device you want. The indicator of the selected device lights up. Each time you press INPUT, the input changes cyclically as follows.
TV input → BLUETOOTH input → USB input

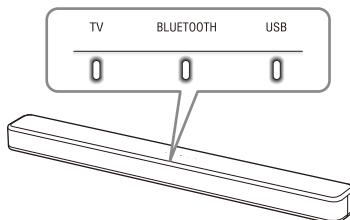

TV input

- TV that is connected to the TV IN (OPTICAL) jack
- TV compatible with the Audio Return Channel (ARC) function that is connected to the HDMI OUT (TV (ARC)) jack

When you connect the TV to both the HDMI OUT (TV (ARC)) and TV IN (OPTICAL) jacks, the input of the HDMI OUT (TV (ARC)) jack has priority.

BLUETOOTH input

BLUETOOTH device that supports A2DP
For details, see "Listening to Music/Sound with the BLUETOOTH® Function" (page 21).

USB input

USB device that is connected to the \downarrow (USB) port
For details, see "Listening to Music on a USB Device" (page 17).

2 Adjust the volume by pressing \triangleleft +/− on the remote control.

Tip


You can also select the input by pressing \triangleleft on the Bar Speaker.

Selecting the Sound Effect

Adjusting the Sound

Enjoying the Sound Effect that is Tailored to Sound Sources (Sound Mode)

You can easily enjoy pre-programmed sound effects that are tailored to different kinds of sound sources.

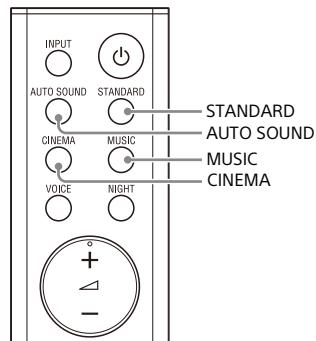

Press AUTO SOUND, CINEMA, MUSIC, or STANDARD to select the sound mode.

When selecting the sound mode, the TV indicator flashes once.

AUTO SOUND

You can enjoy the sound with Sony-recommended sound mode. The sound mode is automatically optimized according to playback content and function.

CINEMA

Sounds are played back with surround effects, and they are realistic and powerful, making them suitable for movies.

MUSIC

Sound effects are optimized for listening to music.

STANDARD

Sound effects are optimized for the individual source.

Enjoying Clear Sound with Low Volume at Midnight (NIGHT)

You can compress sound in accordance with the information contained in the content by setting the night mode to on. Sound is output at low volume with minimum loss of fidelity and clarity of dialogue.

Press NIGHT to set the function to on or off.

Night mode on

The TV indicator flashes twice.

Night mode off

The TV indicator flashes once.

Note

When you turn the system off, the night mode is set to off automatically.

Making Dialogs Clearer (VOICE)

You can make dialogs clearer by setting the voice mode to on.

Press VOICE to set the function to on or off.

Voice mode on

The TV indicator flashes twice.

Voice mode off

The TV indicator flashes once.

Making Sound with Low Volume Easy to Hear by Compressing Dynamic Range

This function works only when playing the Dolby Digital signal of the device that is connected to the TV IN (OPTICAL)/HDMI OUT (TV (ARC)) jack. When you set Dolby DRC (Dynamic Range Control) to on, dynamic range of the audio signal (range between the maximum and minimum volume) is compressed and sound with low volume is easy to hear.

Press and hold AUDIO for 5 seconds to set the function to on or off.

Dolby DRC on

The USB indicator flashes twice.

Dolby DRC off

The USB indicator flashes once.

Enjoying Multiplex Broadcast Sound (AUDIO)

You can enjoy multiplex broadcast sound when the system receives a Dolby Digital multiplex broadcast signal.

Press AUDIO repeatedly.

The channel changes cyclically as follows.
Main → Sub → Main/Sub

Main

Outputs only the main channel.
The TV indicator flashes once.

Sub

Outputs only the sub channel.
The USB indicator flashes once.

Main/Sub

Main sound is output from the left speaker and sub sound is output from the right speaker.
The TV and USB indicators flash once.

Note

To receive a Dolby Digital signal, you need to connect a TV or other devices to the TV IN (OPTICAL) jack with the optical digital cable (supplied) or the HDMI OUT (TV (ARC)) jack with an HDMI cable (not supplied).

Listening to Music/Sound with the BLUETOOTH® Function


Listening to Music from a Mobile Device

You can listen to music stored on a mobile device such as a smartphone or tablet via a wireless connection by connecting the system and the mobile device with the BLUETOOTH function. When connecting to the mobile device with the BLUETOOTH function, you can operate by simply using the supplied remote control without turning the TV on.

Listening to Music by Pairing with a Mobile Device

1 Press and hold the BLUETOOTH button on the Bar Speaker for 5 seconds.

The system enters the pairing mode and the BLUETOOTH indicator flashes quickly.

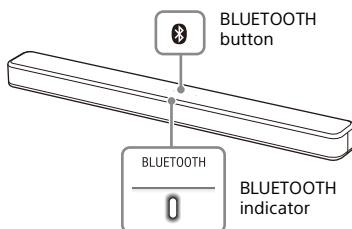

2 On the mobile device, turn on the BLUETOOTH function, and then select "HT-S100F" or "HT-SF150" after searching for it.

If a Passkey is requested, enter "0000."

3 Make sure that the BLUETOOTH indicator on the Bar Speaker lights in blue.

A connection between the system and mobile device has been established.

4 Start audio playback with the music app on the connected mobile device.

Sound is output from the Bar Speaker.

5 Adjust the volume.

- Adjust the volume by pressing \triangleleft $+\!-\!$ on the remote control.
- \blacktriangleright II and \blacktriangleleft \blacktriangleright on the remote control can be used for the BLUETOOTH function.


Notes

- You can pair up to 8 BLUETOOTH devices. If a 9th BLUETOOTH device is paired, the least recently connected device will be replaced by the new one.
- Perform pairing for the second and subsequent mobile devices.

Tips

- You can check the connection status of the BLUETOOTH function by checking the BLUETOOTH indicator status (page 9).
- While the BLUETOOTH input is being selected, the system enters the pairing mode by pressing the BLUETOOTH button on the Bar Speaker shortly.

Listening to Music from the Paired Mobile Device

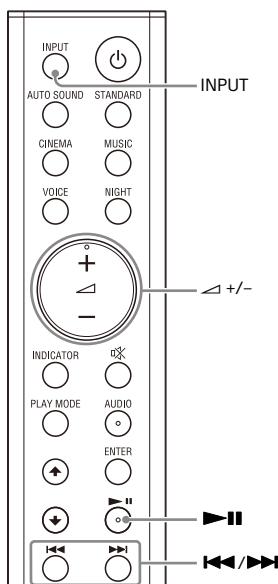

4 Start audio playback with the music app on the connected mobile device.

Sound is output from the Bar Speaker.

5 Adjust the volume.

- Adjust the volume by pressing \triangleleft +/- on the remote control.
- $\blacktriangleright\text{II}$ and $\text{I}\blacktriangleleft/\text{II}\blacktriangleright$ on the remote control can be used for the BLUETOOTH function.

1 Turn the BLUETOOTH function of the mobile device to on.

2 Press INPUT repeatedly to select the BLUETOOTH input or press the BLUETOOTH button on the Bar Speaker shortly.

The BLUETOOTH indicator flashes and the system automatically reconnects to the BLUETOOTH device it was most recently connected to.

3 Make sure that the BLUETOOTH indicator lights in blue.

A connection between the system and mobile device has been established.

Turning the System On by Operating the BLUETOOTH Device

When the system has pairing information, you can turn the system on and listen to music from a BLUETOOTH device even when the system is in standby mode by setting the BLUETOOTH standby mode to on.

Press and hold NIGHT for 5 seconds to set the function to on or off.

BLUETOOTH standby mode on

The USB indicator flashes twice.

BLUETOOTH standby mode off

The USB indicator flashes once.

Note

While the BLUETOOTH standby mode is on, standby power consumption increases.

Turning the BLUETOOTH Function Off

You can turn the BLUETOOTH function off.

Press and hold $\text{\textcircled{1}}$, $\text{\textcircled{2}}$, and $\text{\textcircled{-}}$ on the Bar Speaker for 10 seconds to set the function to on or off.

BLUETOOTH function on

The USB indicator flashes twice.

BLUETOOTH function off

The USB indicator flashes once.

Note

When the BLUETOOTH function is set to off, the BLUETOOTH input is skipped while selecting input by pressing INPUT.